




Installation instructions

Scotchlok connector for IP68 installations

GWFcoder® MP (6/8 roller wheels) – RCM® split / RCM®-LRW... (radio module)


1. Remove the cable end sleeves.

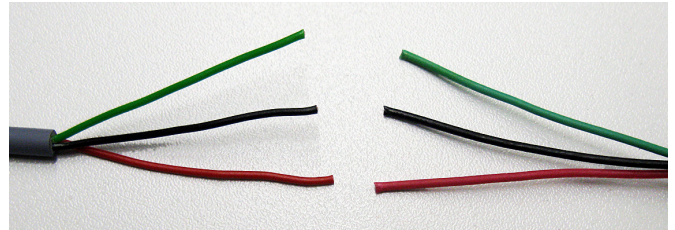

2. Insert one end of each cable as far as possible into the two openings of the Scotchlok connector.


Do not remove the insulation from the ends of the cables.

When connecting the IP68 GWFcoder® MP meter to the RCM® split / RCM®-LRW... radio module, interconnect the red, black and green ends of the cables.

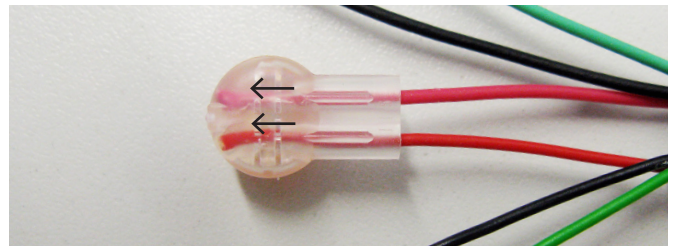

3. Use a pipe wrench to crimp the clamp.

The cable ends must remain fully inserted in the Scotchlok connector.

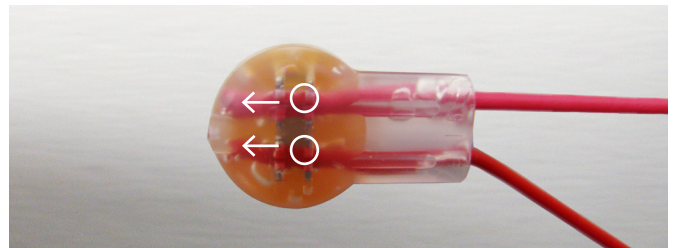

Important: 3 x 0,25 mm² cable must be used for the cable extension (**only stranded cable, not wire**).

